 
TANITA

## **KJ-216 operation guide**

## Normal Measurement







After it displays "0" you can start



Press (切) to turn off the scale.



◆Tare function





measurement.





Press



Place the container Press  $(\overline{\lambda})$  again to reset the measurement to 0g.

Then you can start the measurement.



%If the weight of both container and the measured objects exceed 2000g, it will show *EEEE*. If below -1000g, it will show ----.

Press 🗐 to turn off the scale.

## Auto power off

The scale will turn off automatically if it is not used for 6 minutes.

Troubleshooting	
No response after pressing ①表示	<ul> <li>Please replace with new batteries.</li> <li>Please make sure the batteries are correctly inserted.</li> </ul>
Errb or Errl is displayed	Please contact our distributor for repair service.
Err is displayed	Please make sure you use the scale in a stable environment, not affected by vibration or wind.
is displayed	Please replace with new batteries.