

Digital Scale Instruction Manual



KD-177

Notice

1. Do not dismantle the unit.
2. Avoid using chemicals to prevent creating a hazard.
3. Use the unit on a firm, flat surface.

Name of parts

A	Tray
B	LCD Display
C	OFF button
D	ON/TARE button
E	Battery compartment

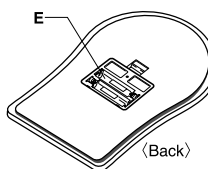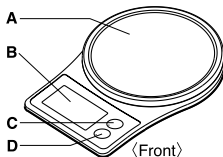

How to use

1. Open the battery compartment cover (see figure 1) and insert 2 × "AA" batteries as indicated. NB. Make sure that the polarity of batteries is correctly aligned.


2. Press the ON/TARE button.

The display will show "8888".

Wait until the display shows "0" before proceeding to weigh item(s).

NB. Make sure you place item(s) in the centre of the tray.

If the weight of the item(s) exceeds the scale's capacity, "EEEE" will appear on the display.

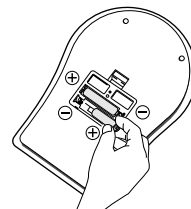

3. Tare weighing function

The tare function allows you to add and weigh individual item(s) without removing contents of the bowl.

When the display shows "0", put the bowl onto the scale and press the ON/TARE button. The display will revert to "0" again.

Now add and weigh item(s). Pressing the ON/TARE button before adding and weighing each individual item.

After removing the bowl at the end, the display will show a negative reading. Press the ON/TARE button to return the display to "0".

4. Press the OFF button to turn off the power.

5. Auto Power Off

The scale is designed with an auto power-off function for energy efficiency. If the same reading is displayed for more than 6 minutes the scale will automatically turn off.

6. Battery Replacement

If "Lo" appears in the display when attempting to weigh, replace the battery (following previous instructions).

Care instructions and important notes

1. The scale is a precision instrument. Do not dismantle the scale and avoid strong vibrations or shocks.
2. Keep away from direct sunlight and heating appliances, eg. oven.
3. When moving the scale to a new location, where the temperature differs from the previous location by more than 10°C (50°F), leave the scale in the new location for at least 2 hours before using it.
4. Wipe the scale clean with a damp cloth.
5. If the scale is not to be used for a long period of time, remove the batteries.

Specification

	g version
MODEL	KD-177
Capacity	2kg
Minimum graduation	1g